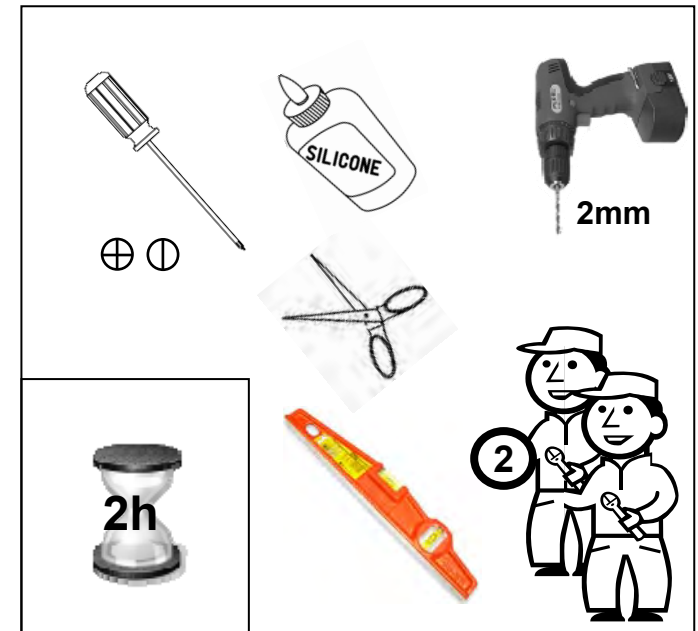



Handleiding van de Sanifun complete douchecabine Percy 115 x 850




85X115X220CM




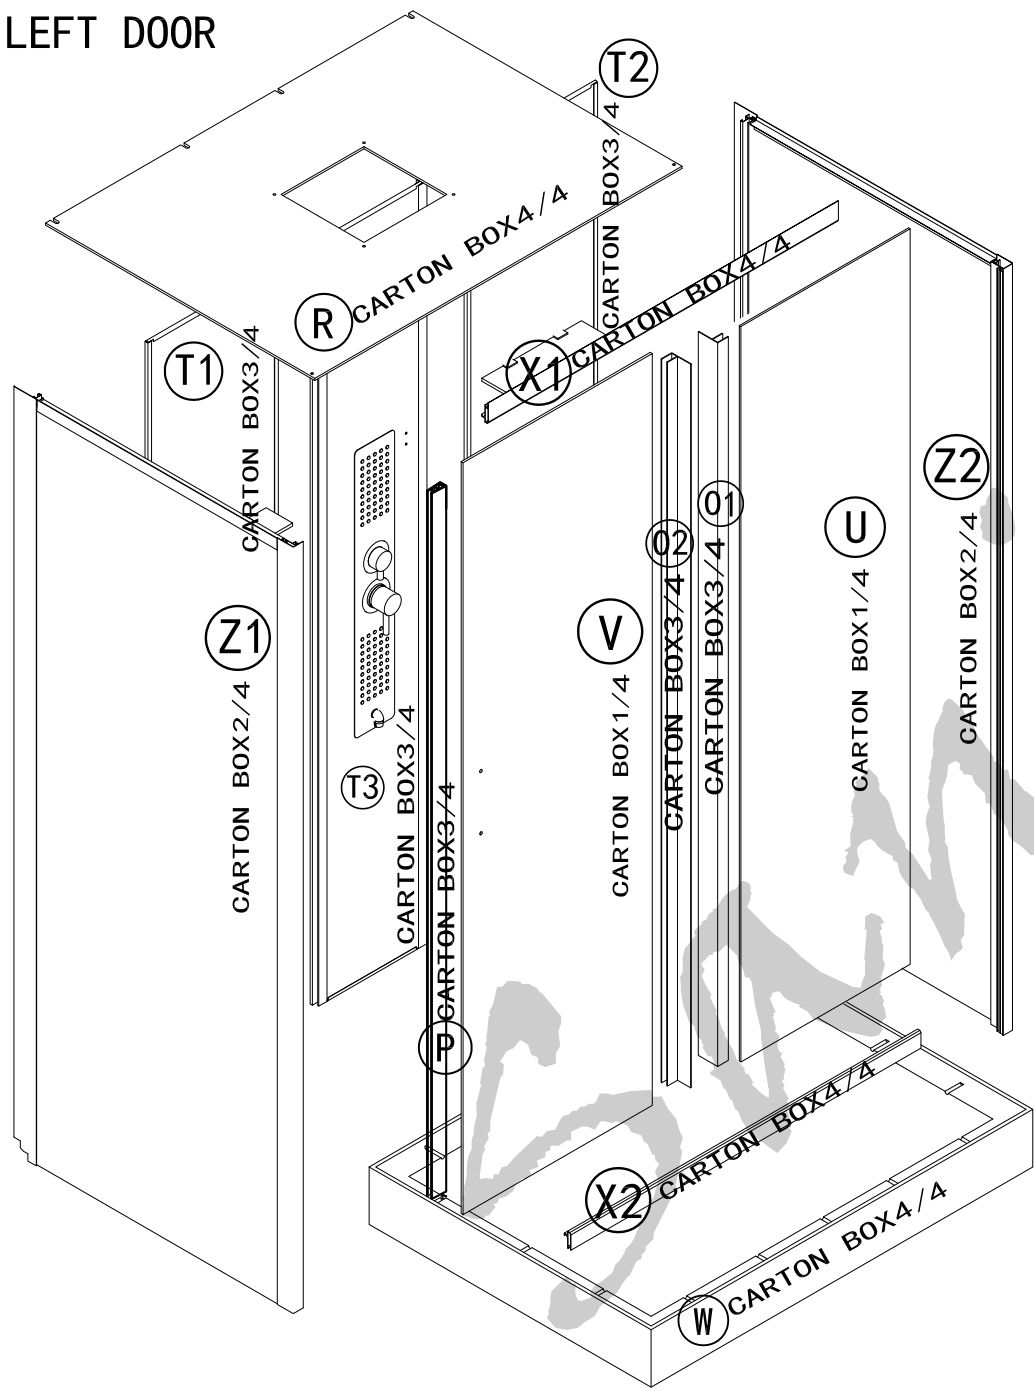BH-F0003SWR
LEFT D00R

























BH-F0003SWL
RIGHT D00R





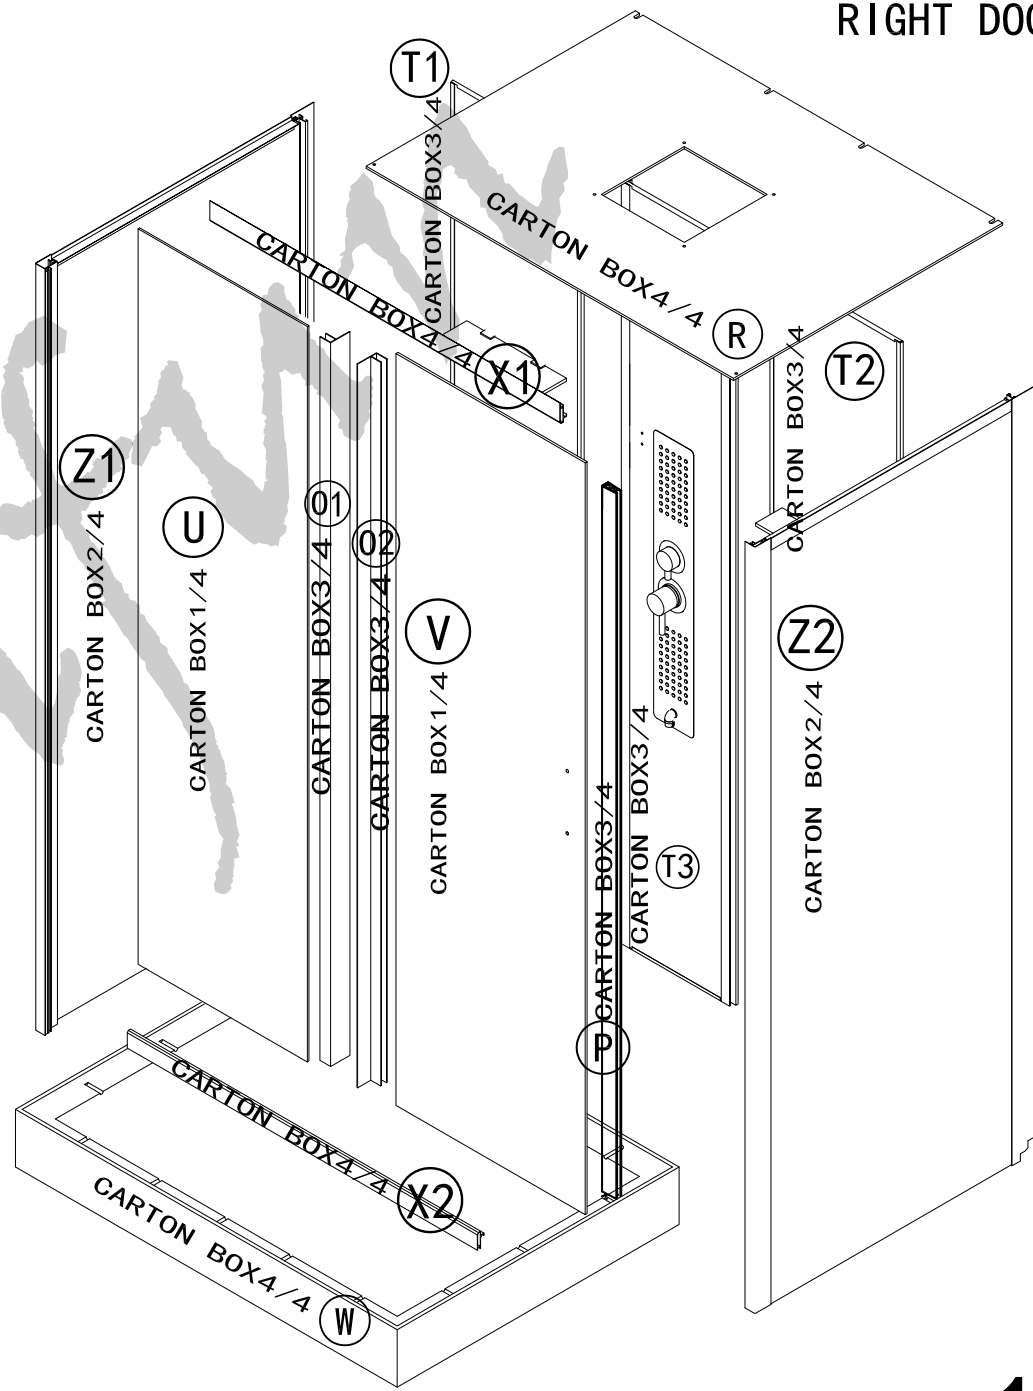


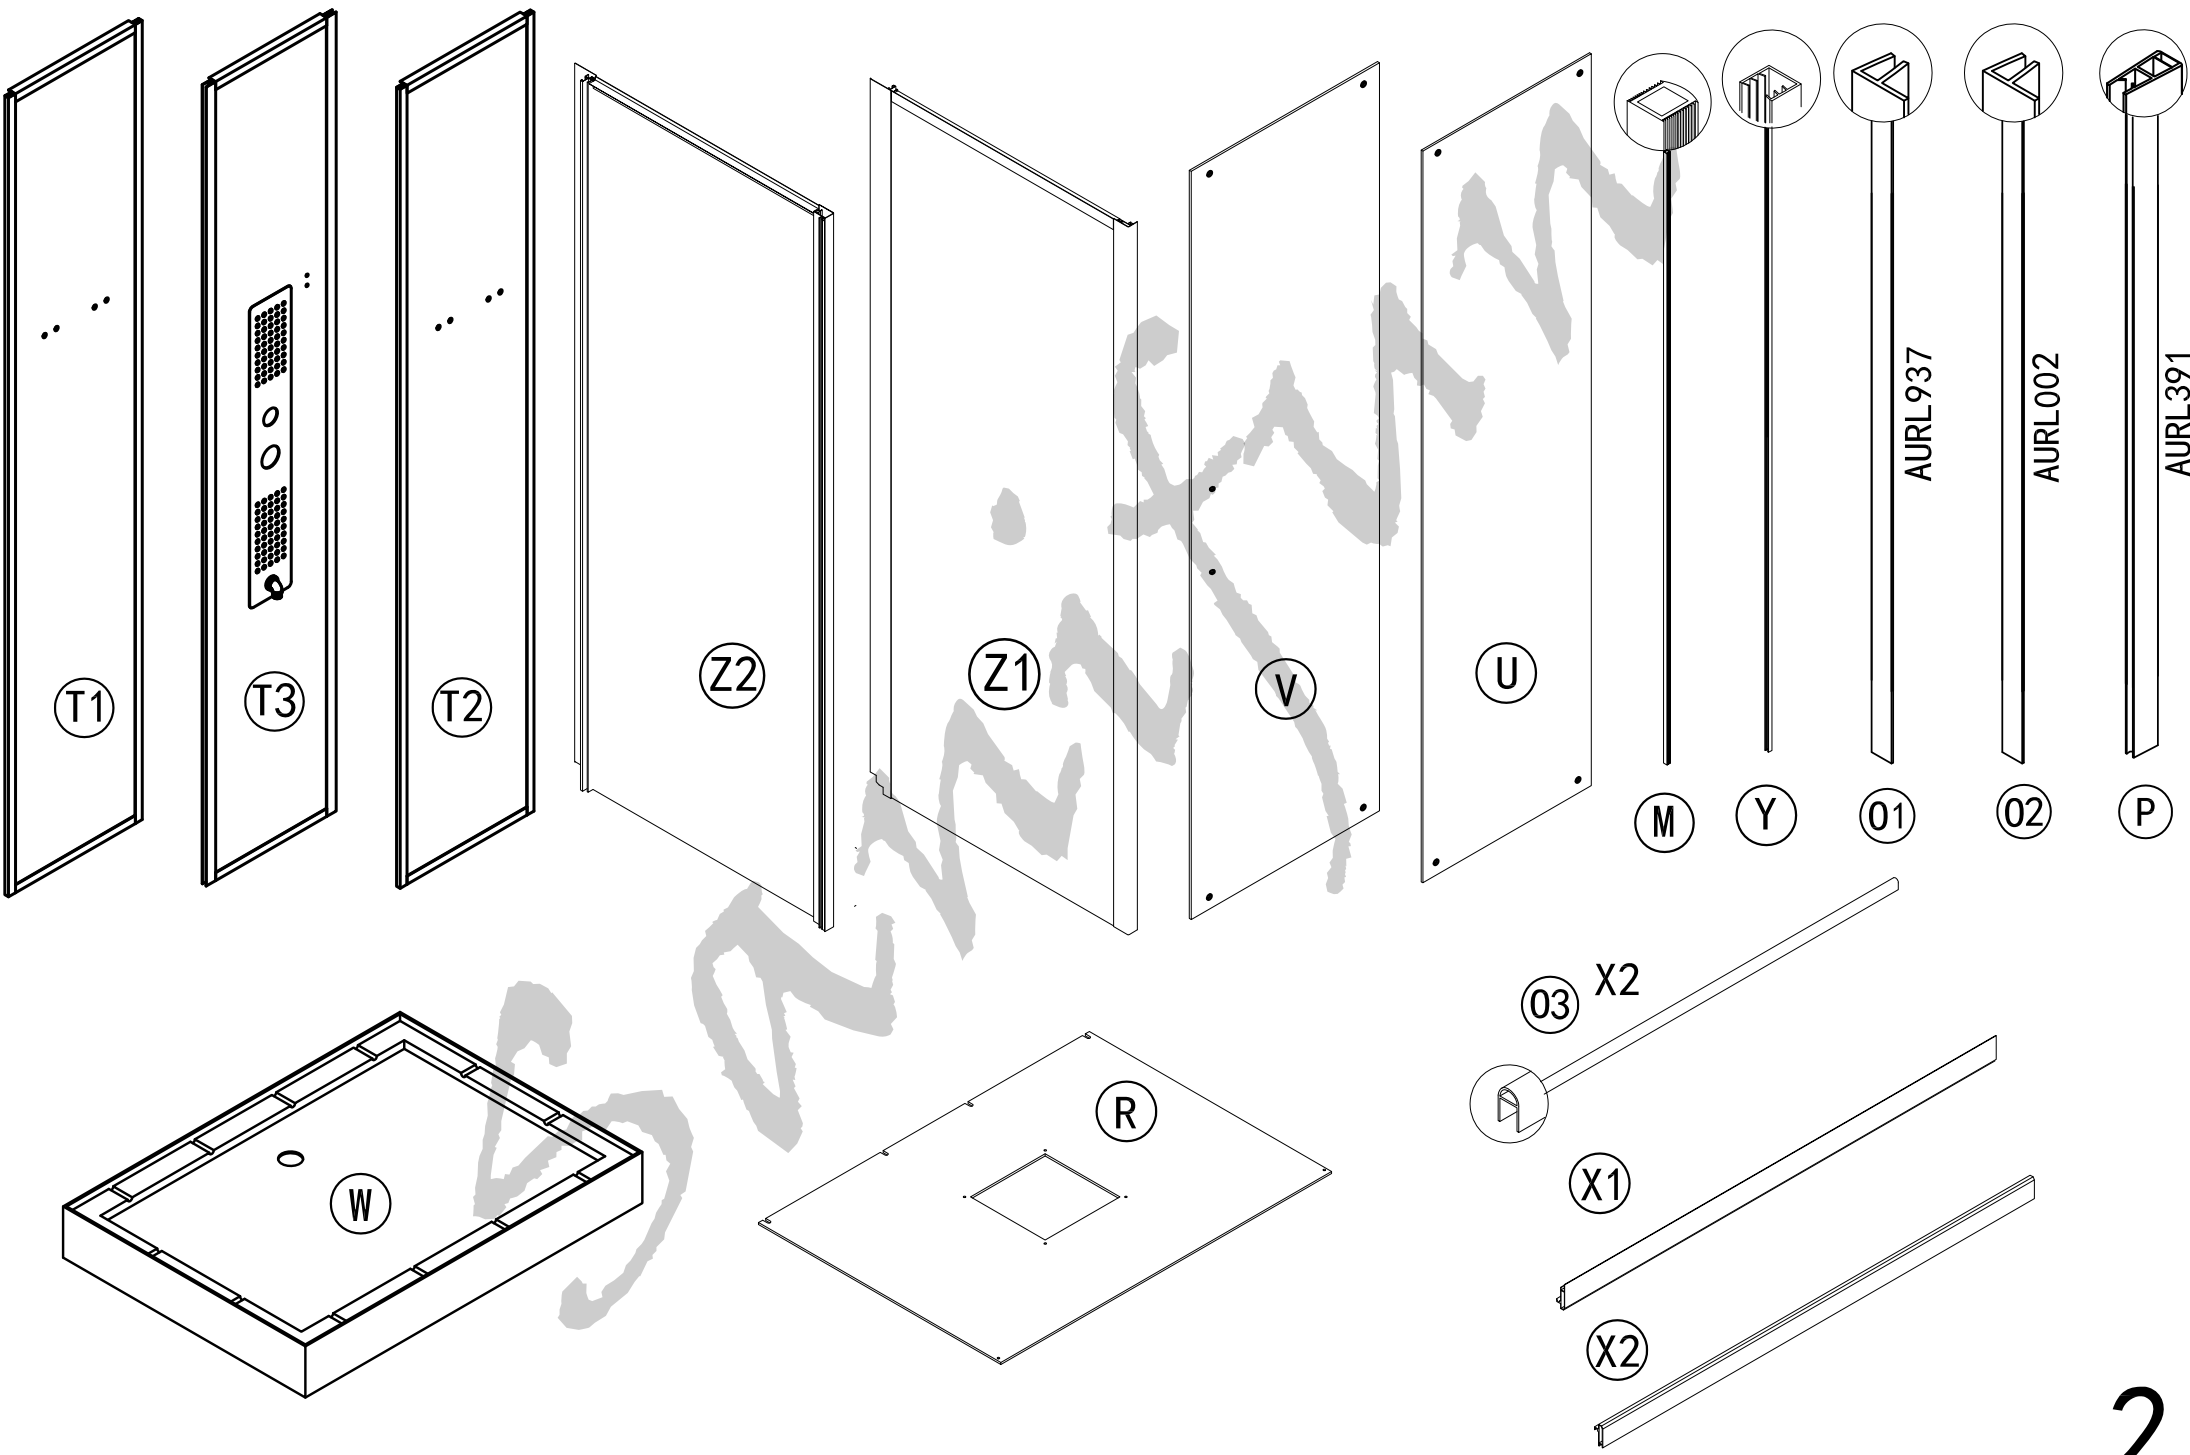



CARTON BOX4/4

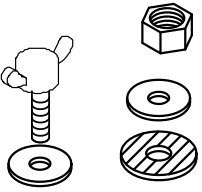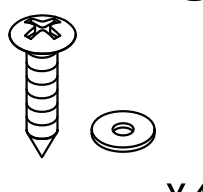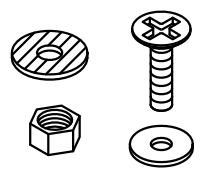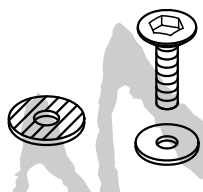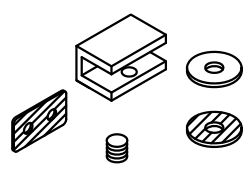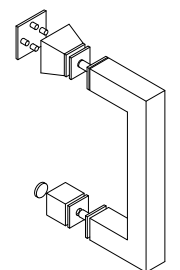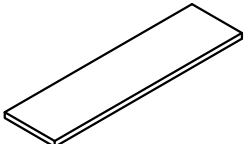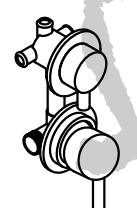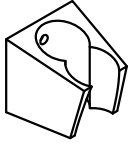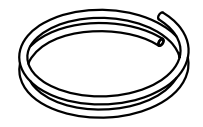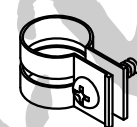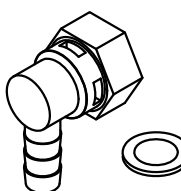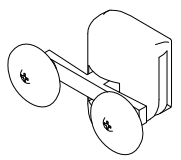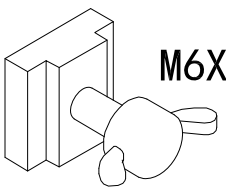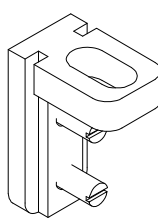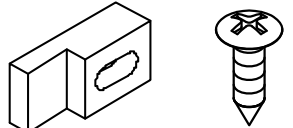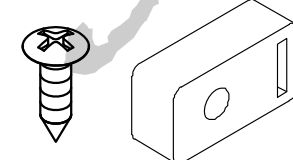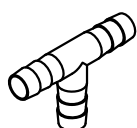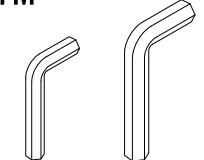M5X25 (A1)  X4	M4X18 (A2)  X4	M4X16 (B1)  X10	M4X10 (B2)  X2	M6X20 (B3)  X2	(C1)  X4
(D)  X1	(E)  X2	(F)  X1	(G1)  X1	(G2)  X1	
(G3)  X1	(G4)  X1	(G5)  X10	(G6)  X3	(G7)  X1	
(H1)  X1	(H2)  X2	(H3)  X2	(H4) M6X16  X12	(H5)  X8	
(I)  M4X12 X2	(R)  M4X10 X2	(L)  X1	3MM 4MM (M)  X1		

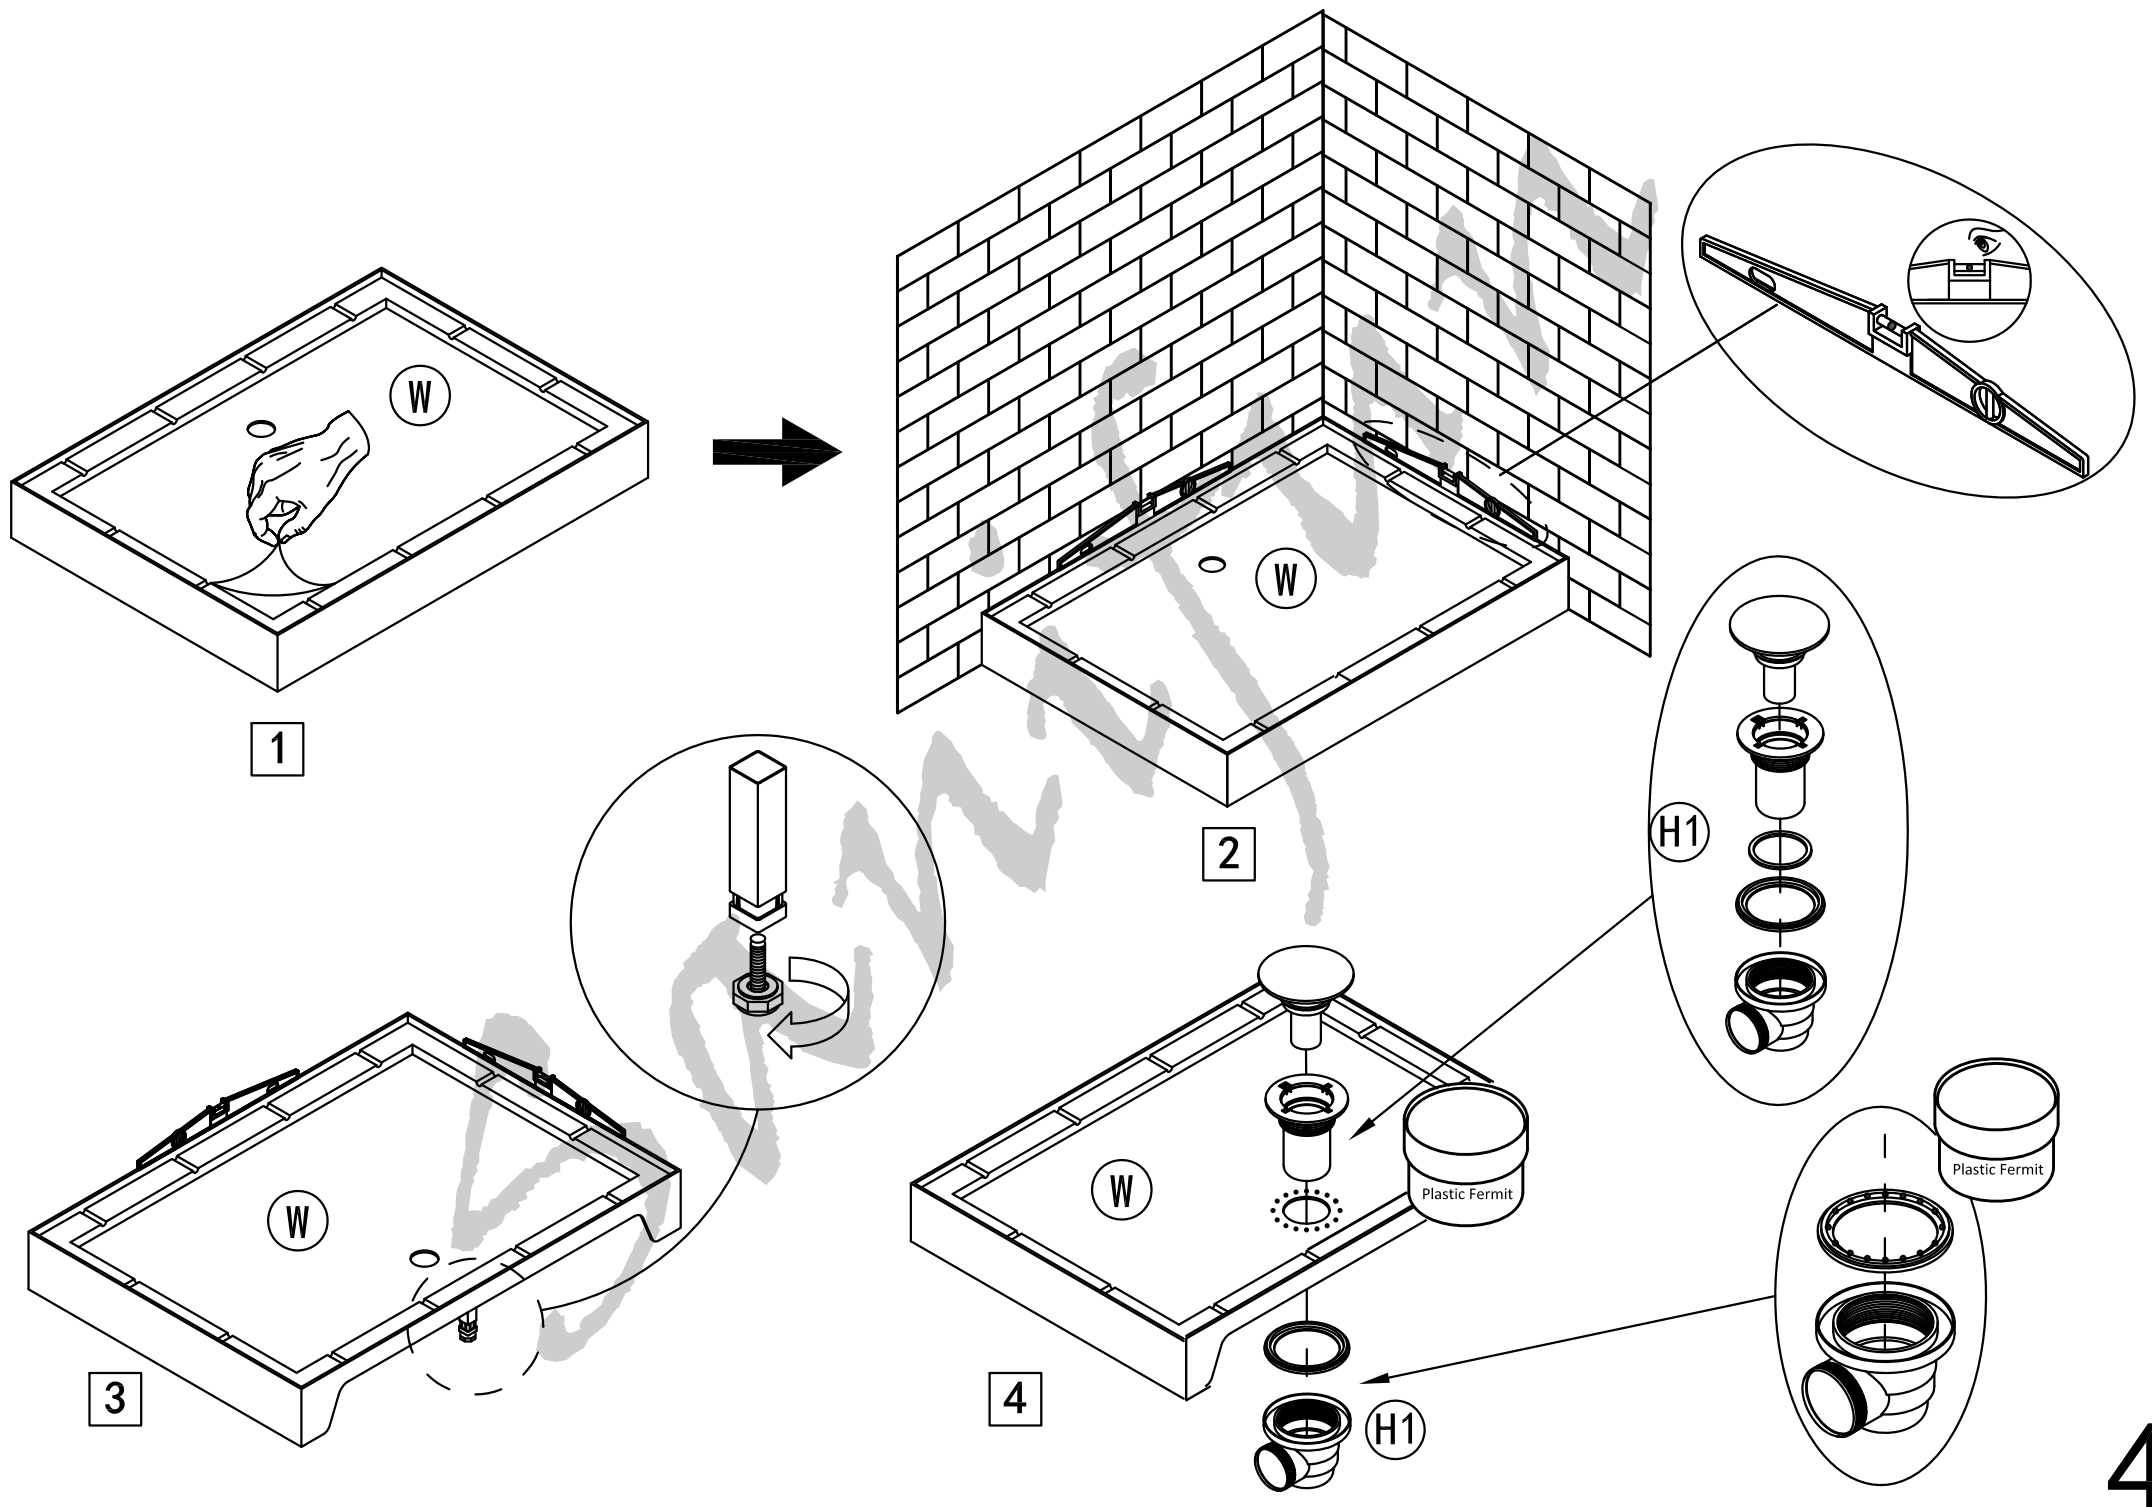

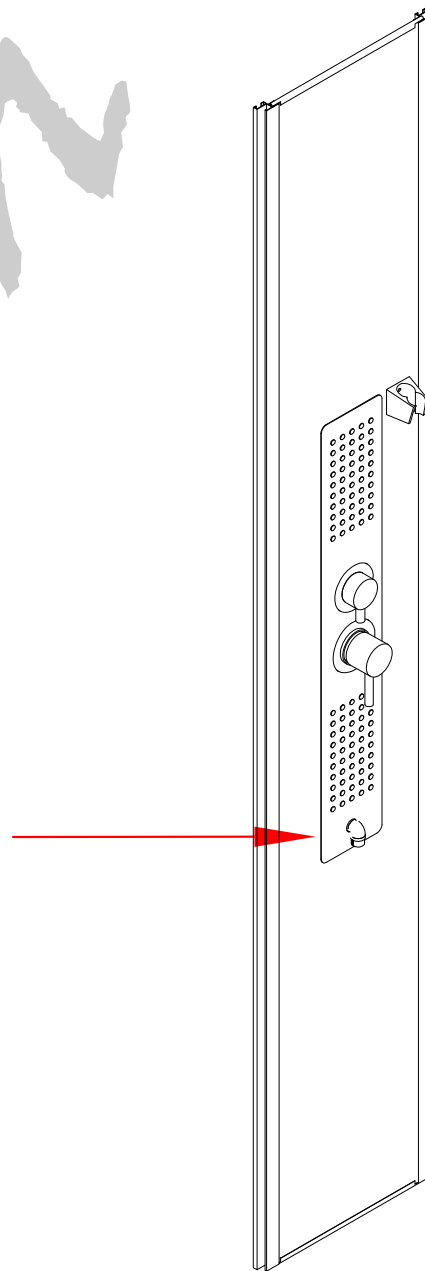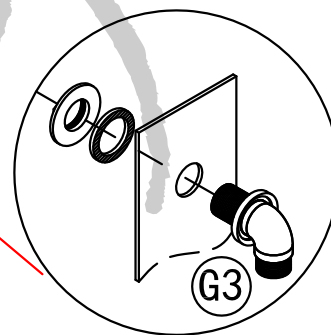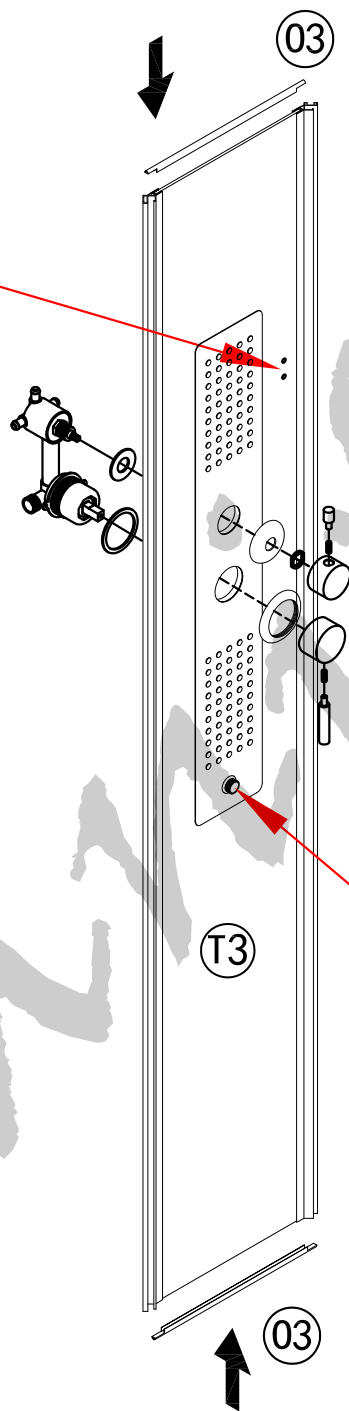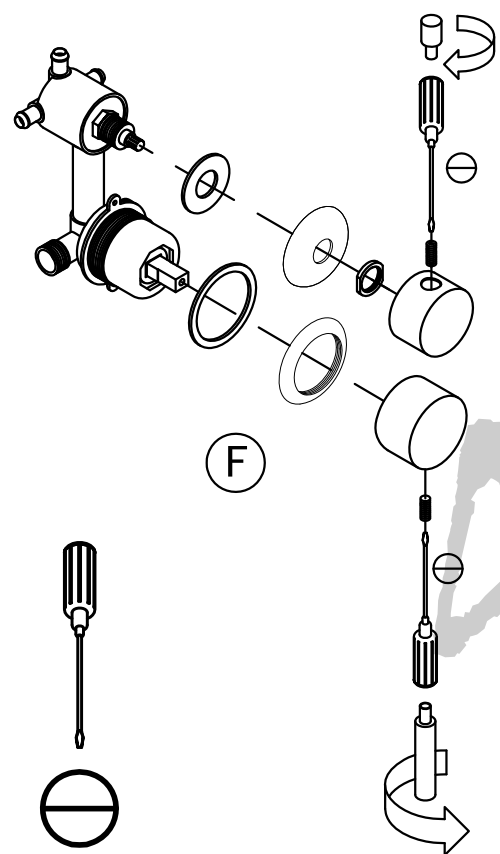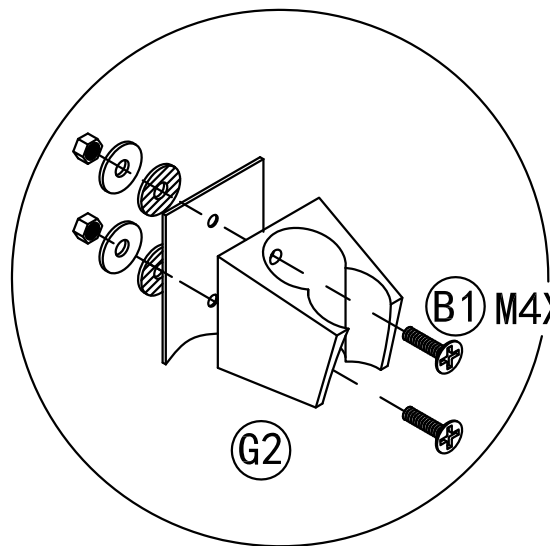

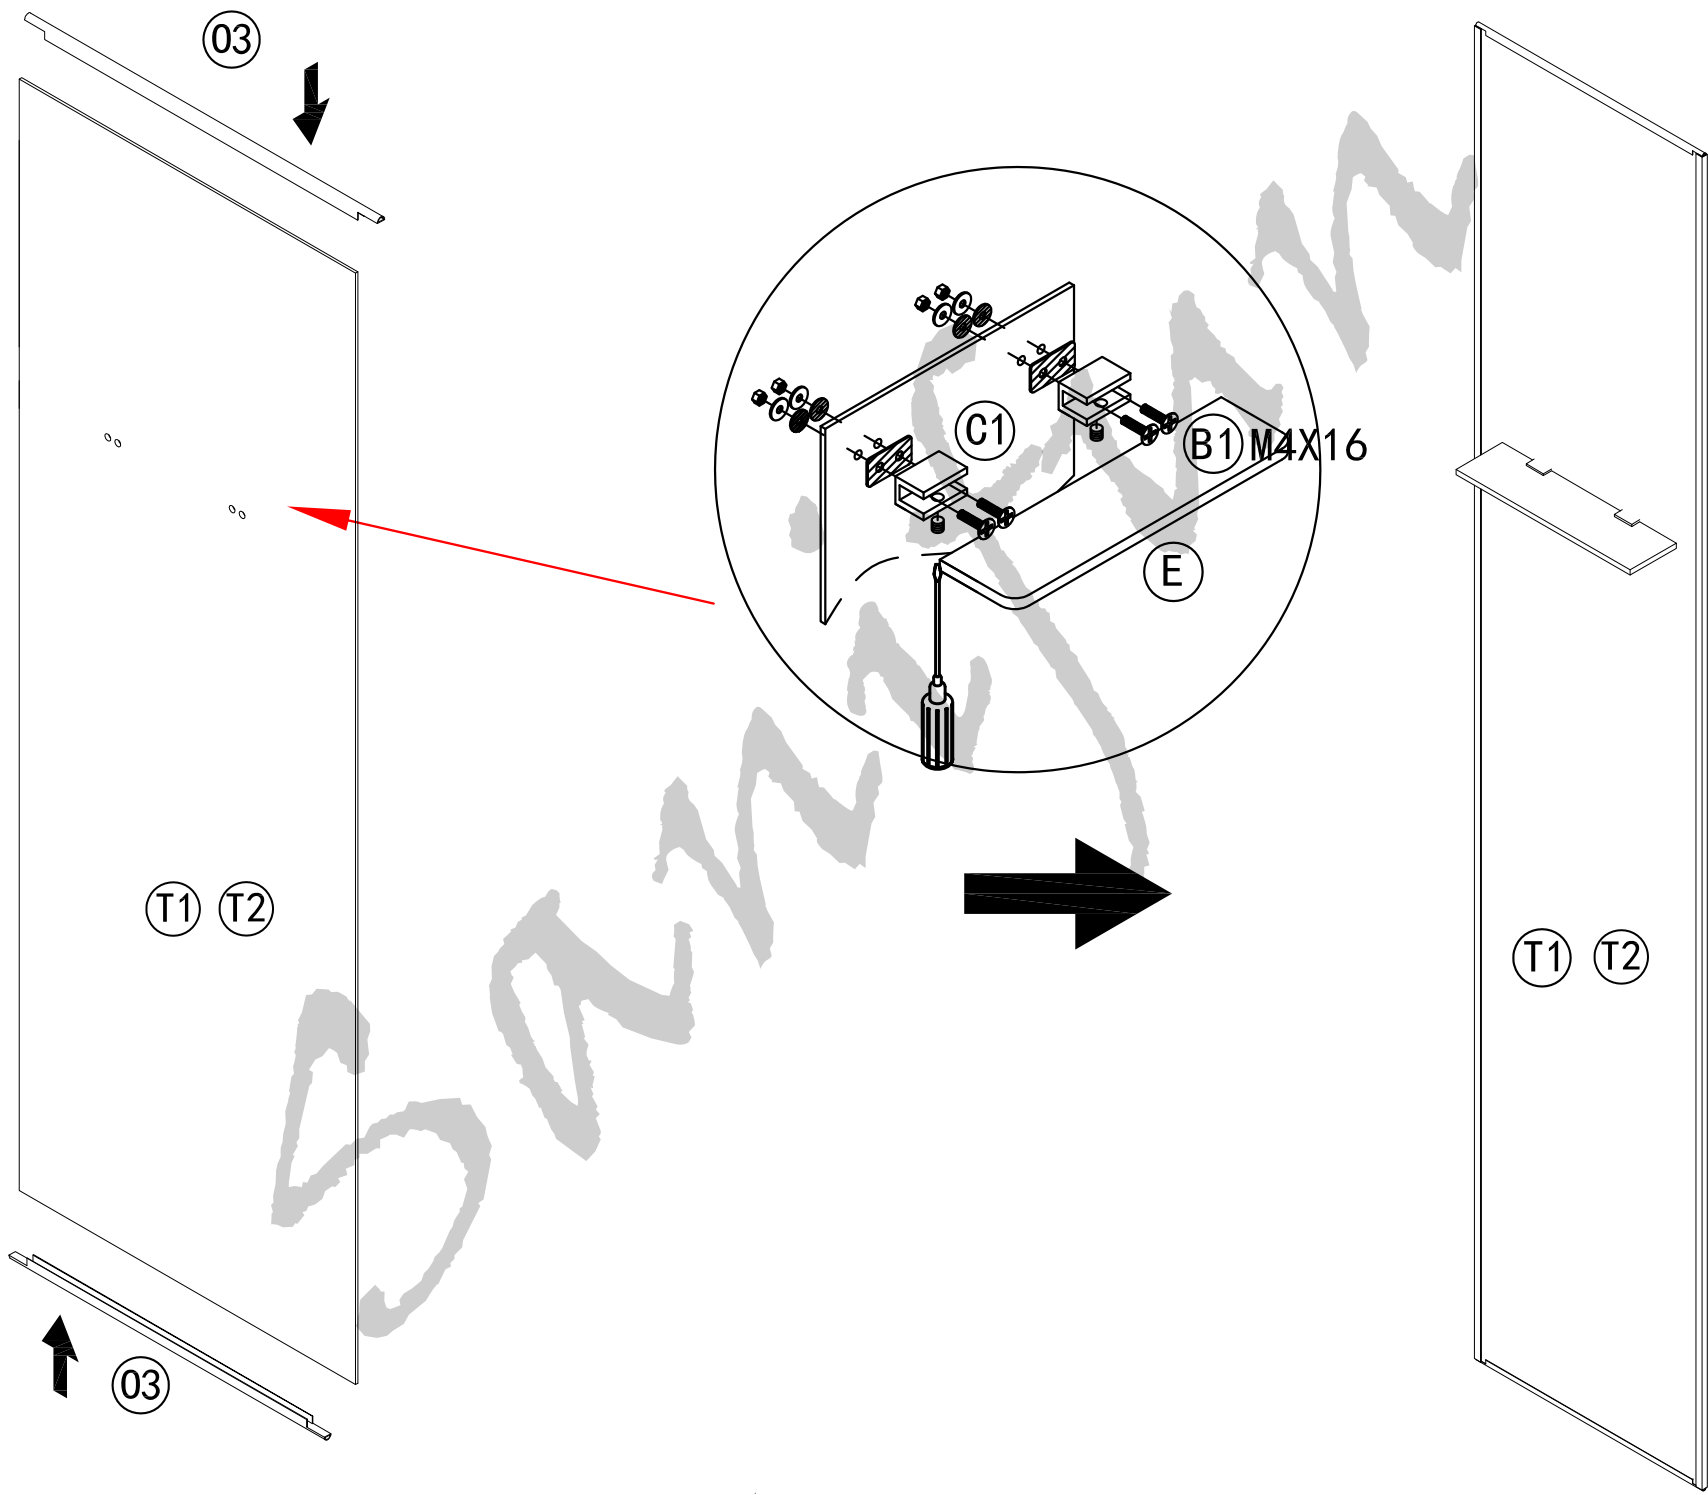

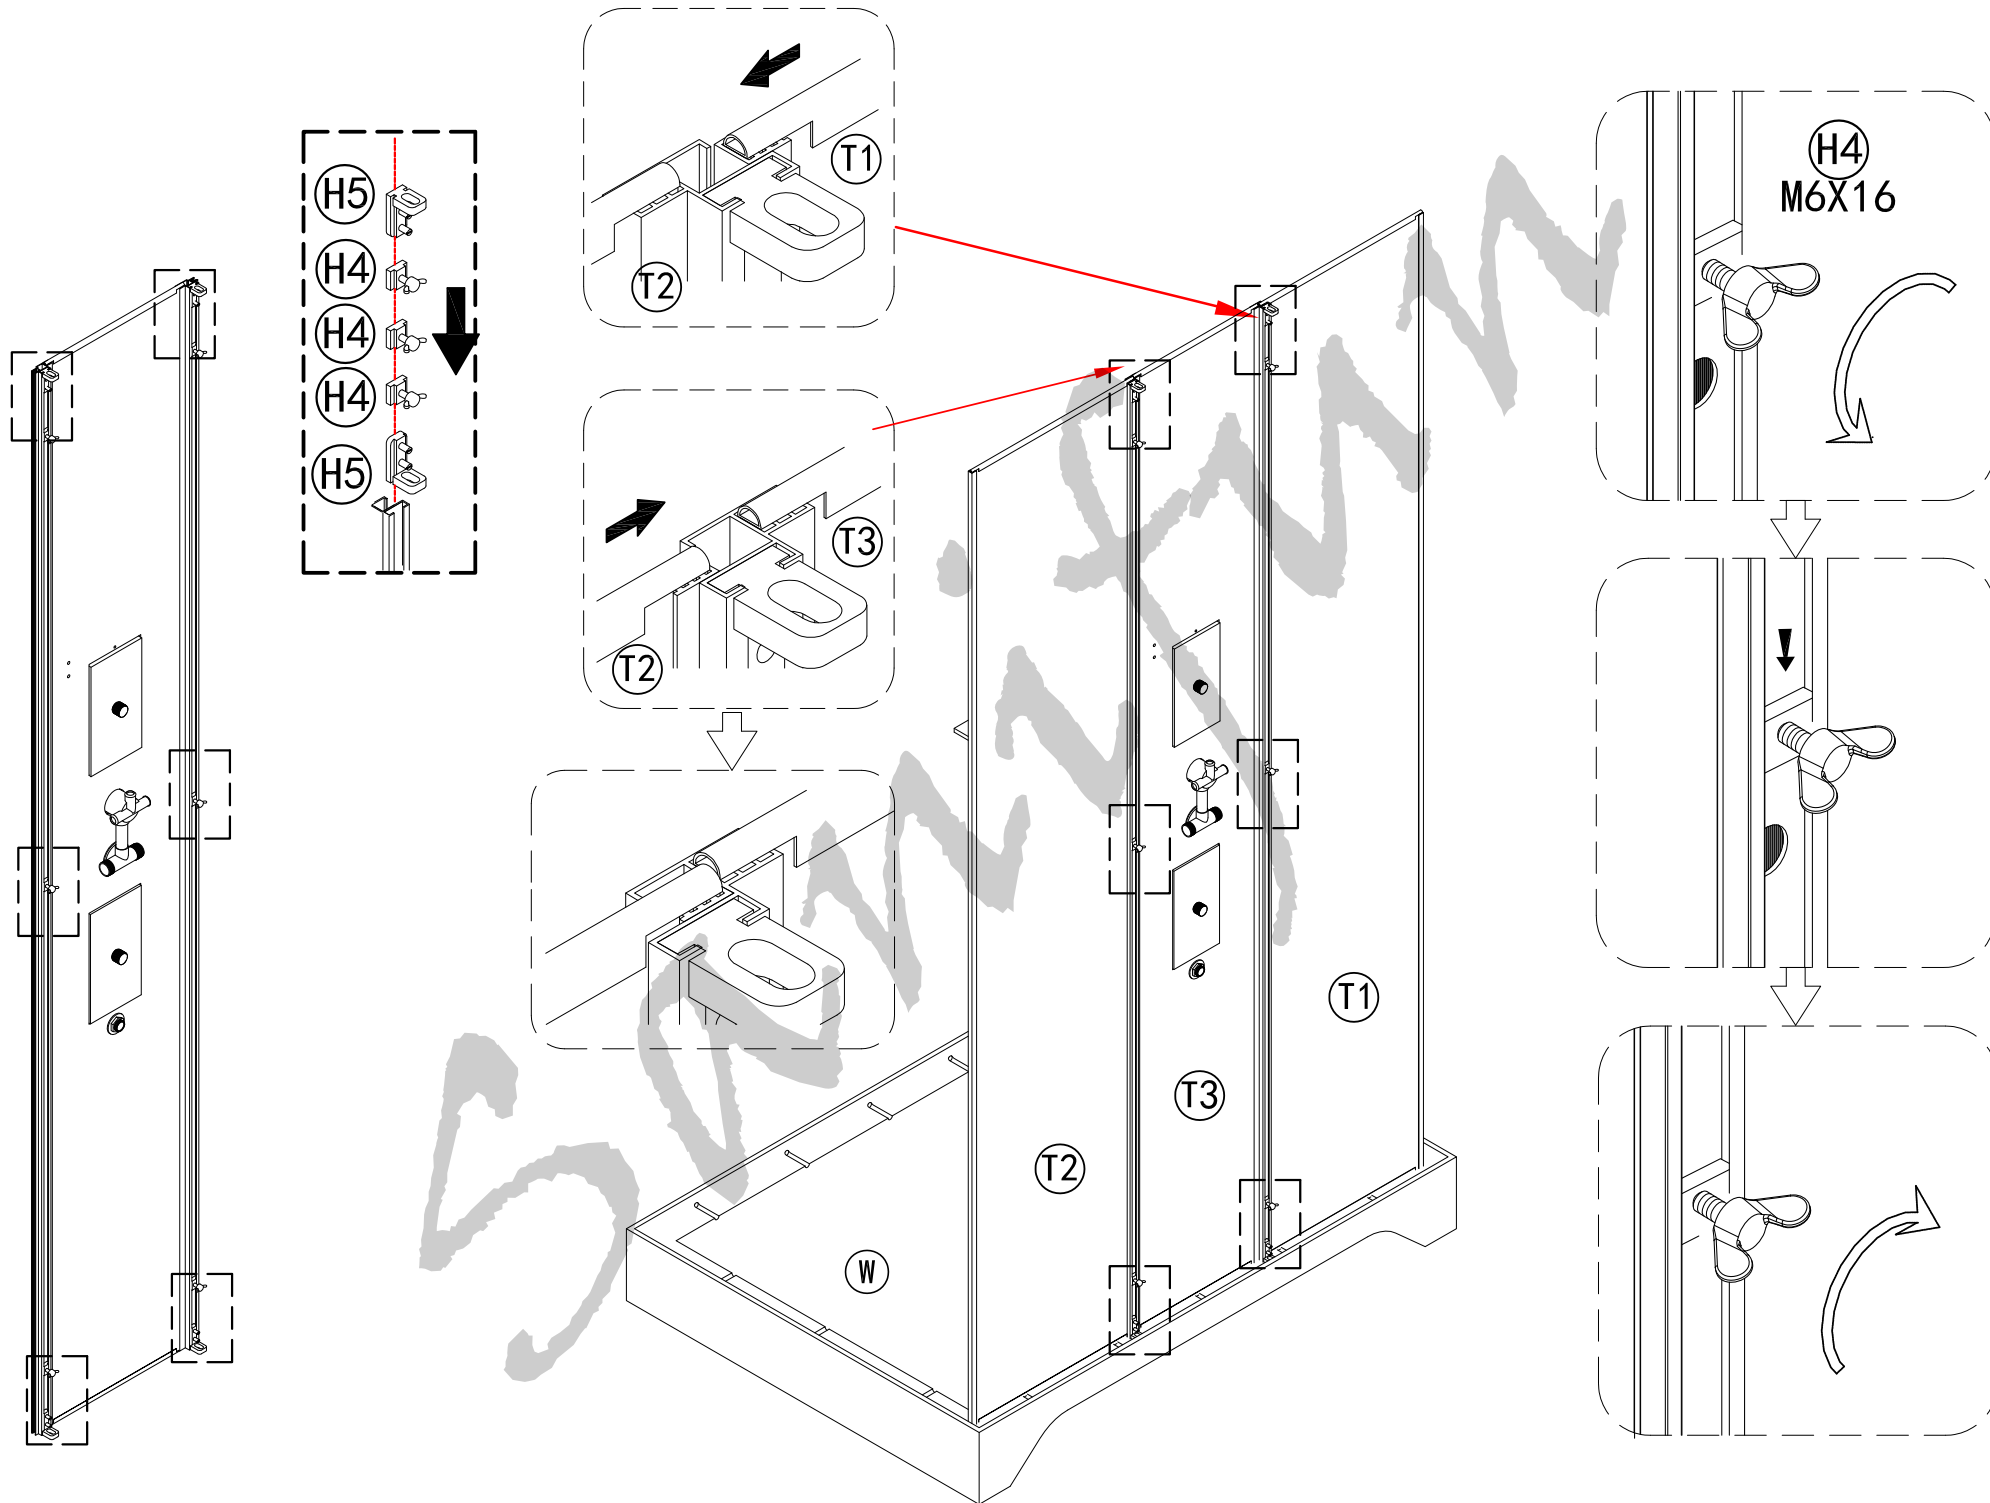

The left door opens, the decorative strip M is installed in Z1;

The right door opens, the decorative strip M is installed in Z2.

